



Central Texas Metal Roofing Supply Co., Inc.

General Installation and Handling Guidelines

- It is the responsibility of the customer (or designer) to ensure that all of the details provided by CTMRS Inc. meet the particular building requirements, building code and assure water tightness of the installed roof system.
- It is the responsibility of the customer (or designer) to determine the structure or substrate is adequate for the metal roof system specified. It should be properly engineered, code-compliant and constructed for the specified metal roof system.
- The customer is responsible for safe material unloading and proper storage. Improper material handling may cause bodily injury or material damage. Manufacturer is not responsible for injuries or damage to the material caused by improper material handling or storage.
- The customer is responsible for proper installation of the roof system in accordance with erection drawings, applicable building code, installation guide and common good construction practices.
- Customer (or installer) is responsible for the safe metal roof installation, work place safety and safe operation of all of the tools and equipment used.
- Some field cutting, and panel fitting of metal roof panels and flashing must be expected and it is a part of the normal installation.
- Remove strippable film from the panels prior to installation. Failure to do so in the reasonable time will result in permanent protective film adhesion to the panel.
- All metal roofing panels should be installed plumb, level and straight with seams parallel, confirming to the intended panel coverage as indicated. Failure to do so will result in with improper panel alignment. Accumulated panel coverage must be periodically checked for the non - parallel seams. This condition must be corrected and frequently monitored as work progresses. Always measure parallel with the eave and same point of the side lap. Improper sequence of the fasteners might contribute to the spread, creep and misalignment of the panels.
- Consider the applicable wind uplift requirements, thermal movement of the panels and flashing and select the attachment method accordingly.
- All of the flashing should be installed in accordance with the provided manual. Remove the strippable film from the flashing prior of the installation.
- Use only roof accessories supplied or approved by the manufacturer. This includes (and is not limited to) insulation, sealants, closures, fasteners, clips, vents, pipe flashings and other roof accessory.

Austin – Headquarters / Sales Office
830 Sagebrush Dr Austin, Texas 78758
(512) 452-1515 (800) 428-7412
Fax (512) 833-7499

www.ctmrs.com
email: info@ctmrs.com

Seguin – Plant / Sales Office
720 West IH 10 Seguin, Texas 78155
(830) 379-3600 (877) 622-8677
Fax (830) 379-8753